


PIKO SmartControl_{light} Kurzanleitung

PIKO
SMARTCONTROL_{light}

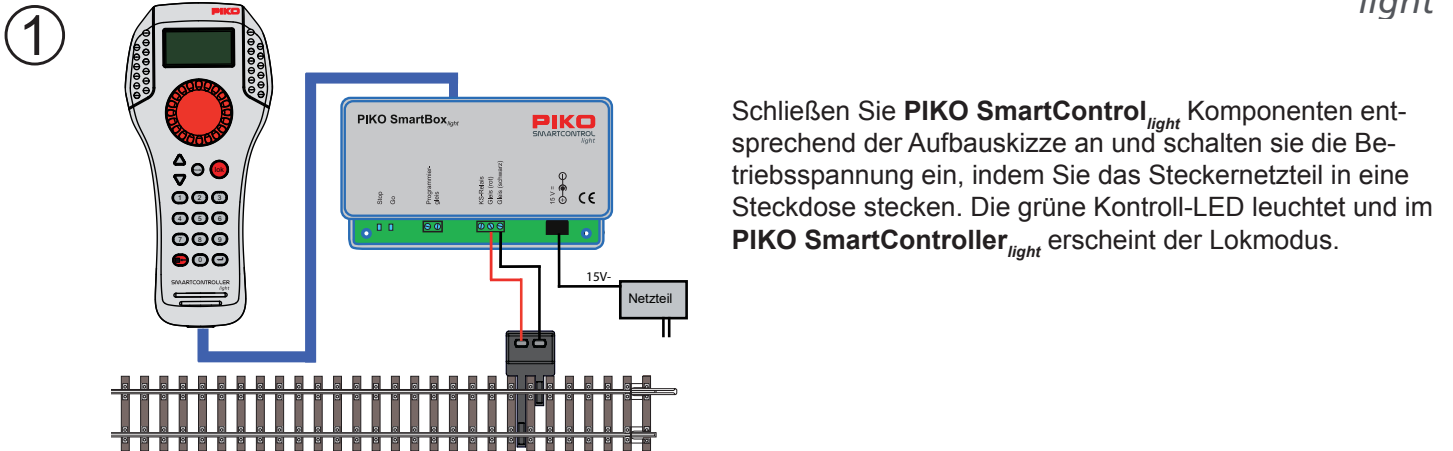

Im Lokmodus wird die Lokauswahl durch die Betätigung der Taste [lok] - oder [↔] - Taste eingeleitet. Durch Drehen des Fahrreglers kann nun eine Lok aus der Lokdatenbank ausgewählt werden. Wurde die gewünschte Lok gefunden, so wird die Auswahl mit der Taste [lok] - oder [↔] - Taste bestätigt.

Adressen der Fahrzeuge aus den **PIKO SmartControl_{light}** Start-Sets:

| Triebfahrzeug | Adresse | Symbol | Funktion F0 | Funktion F6 |
|---------------|---------|--------|---------------|-------------|
| E-Lok | 4 | | Licht ein/aus | Rangiergang |
| Diesellok | 5 | | Licht ein/aus | Rangiergang |
| ICE | 6 | | Licht ein/aus | Rangiergang |


Haben Sie ein **PIKO SmartControl_{light}** Basis Set erworben oder möchten Sie eine digitalisierte Lokomotive steuern, die nicht im Umfang eines **PIKO SmartControl_{light}** Start-Sets enthalten ist, so müssen Sie diese Lokomotive zunächst im **PIKO SmartController_{light}** in der Lokdatenbank anlegen (siehe hierzu die Bedienungsanleitung).



PIKO SmartControl_{light} Quick manual



①

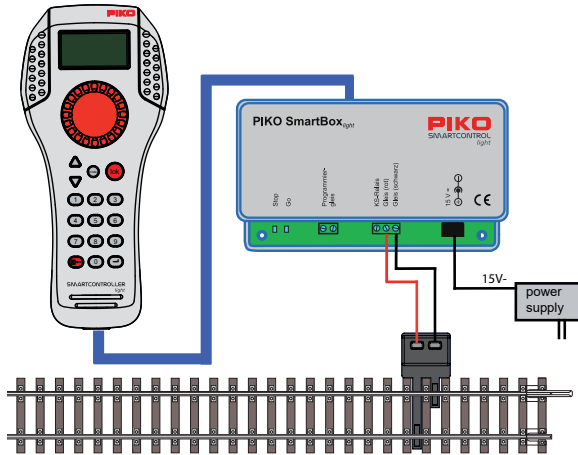

Connect the **PIKO SmartControl_{light}** components according to the installation diagram and turn on the operation current by plugging in the power supply into the power socket. The green control LED will light up and the loco mode of the **PIKO SmartControl_{light}** will be activated.

②



If you purchased the **PIKO SmartControl_{light}** as part of a **PIKO SmartControl_{light}** starter set, you can now start the operation on your model railway system because all traction units of the starter sets are already pre-installed in the **PIKO SmartController_{light}**.

In loco mode, you can start the selection of a locomotive by pressing the [lok] or [←] key. By using the encoder wheel, you can now select a loco out of the loco database. If you found the desired loco, you can confirm your choice by pressing the [lok] or [←] key again.

Addresses of the vehicles of the **PIKO SmartController_{light}** starter sets:

| Traction unit | Address | Symbol | Function F0 | Function F6 |
|---------------|---------|--------|--------------|---------------|
| Electric loco | 4 | | light on/off | shunting mode |
| Diesel loco | 5 | | light on/off | shunting mode |
| ICE | 6 | | light on/off | shunting mode |

If you purchased the **PIKO SmartControl_{light}** basic set or if you want to control a digitized locomotive, that is not part of a **PIKO SmartControl_{light}** starter set, you first have to enter the locomotive into the loco database of the **PIKO SmartController_{light}** (to learn how to do that, please check our detailed instruction manual).

③



You can directly control the light and up to 8 special functions by using the number keys. With the up / down ([▲] / [▼]) keys you can select further functions which you can also control by using the number keys.

55016-90-7020

You can find a more extensive instruction of how to start-up your **PIKO SmartControl_{light}** in our detailed instruction manual #55016-90-7000.