

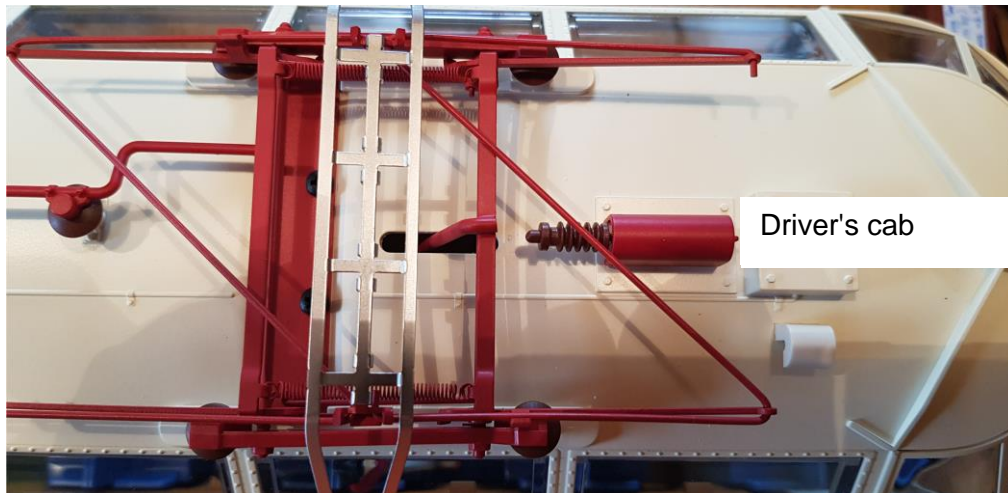


Removal of the tension springs of the scissor pantograph.

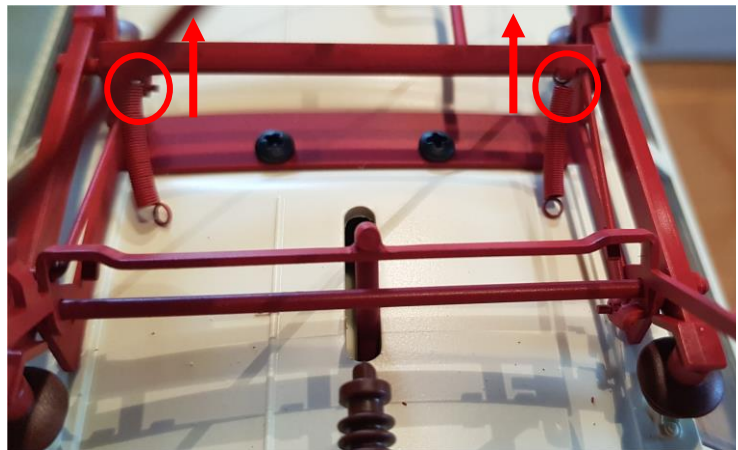

Extend the pantograph so that the springs have as little tension as possible. Unhook the springs on the driver's cab side first with tweezers. Then also on the other side.

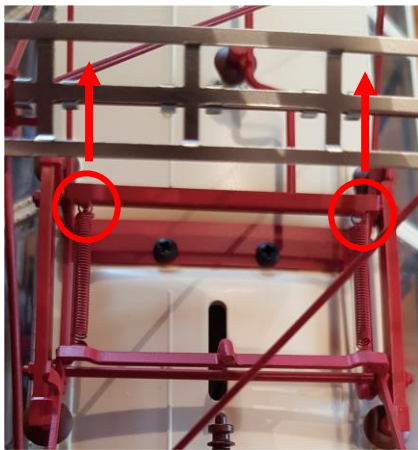

Now the scissor pantograph has no tractive forces of its own and is moved exclusively by the servo.

